

C/ Almazara 11
Tres Cantos (Madrid)
Tel 91-803-77-11
www.aviasport.com
roberto@aviasport.com

OIL PRESSURE FOR ROTAX ENGINES 912/914 WITH VDO SENDER. Diameter 52mm. PSI. IM-571

Preface

The IM-571 instruments have been designed especially to measure the Oil Pressure in Rotax® engines 912/914.

The IM-571 is available in 52 mm size.

The instruments have been designed to work with both 12V and 24V systems.

The minimum instrumentation requirements for BRP ROTAX® four stroke engines include a gauge for continuous Oil Pressure monitorization.

General Information

ATTENTION: The IM-571 has not undergone any safety or durability examination to Civil Aviation standards but does incorporate the latest technical development and has been thoroughly tested. Despite the Oil Pressure Gauge being a precision instrument, false indication or misinterpretation of data could occur. By utilizing this instrument the user acknowledges the possible danger and responsibility for all risks.

State of receipt

- Instruments packed in a plastic bag
- 4 attachment screws
- 3 Loose plugs



Technical data

Case: Plastic Weight: 200g

Suitable for: Rotax 912 VDO Sender

Power Supply: 10..30VDC
Power Current: 0.1 Amp. Max.
Scale: 0..120 PSI

Subdivision scale: 2 PSI Max. Deviation: 2%

Dimensions: See sketch
Calibration: Calibrated by the manufacturer prior to

hinanacturer p

shipment.

*Please refer to the updated User Manual of your engine BRP-ROTAX® engine for the operational limits


Installation Instructions

- Install instruments in pilot's field of vision, free from vibration and glare.
- Protect the instruments against dampness and any kind of gasoline or acid.
- Pay attention to installation dimensions
- Wiring has to be carried out with good quality plastic-sheathed cable.
- When routing cables, prevent possible damage to cables from heat, vibration, shearing or crushina.
- Install a breaker or fuse of 1 Amp.


Instruments Terminals


- 1) (+) Red wire to positive terminal of battery.
- 2) (-) Black wire to negative terminal of batery.
 3) Input to the Oil Pressure Sender.
- 4) Factory calibration input.

Wire Connections

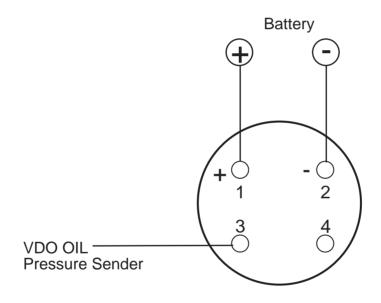

Dimensions

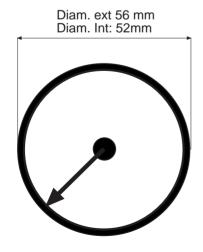

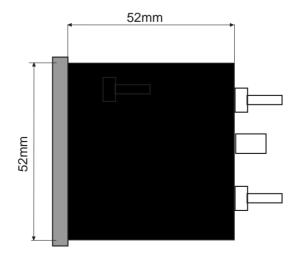

Test & Calibration

The OIL Pressure VDO sender is a resistance which varies with the Oil Pressure.


To check the instrument your need a 200 Ohm potentiometer and a multimeter. Adjust the potentiometer to the multimeter read 88 Ohm. Being careful not to turn the potentiometer, connect according to Figure 1.


With 88 Ohm, the instrument should show 58 PSI. Try with other resistance values.

PSI. Try with other resistance values.





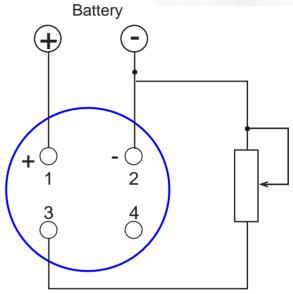

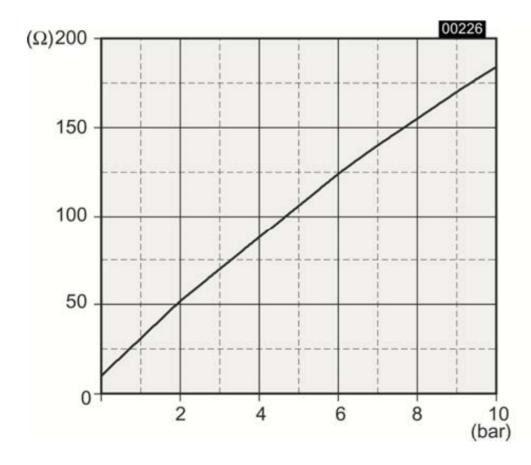

BAR	PSI	ОНМ
0	0	10
1	14	32
2	29	52
3	44	70
4	58	88
5	72	106
6	87	124
7	101	140
8	116	154